


An alternative method for attaching the Shoulder Strap can be done without using the Adapter Loops.



**1** Slide the Male Buckle up along the strap out of the way.

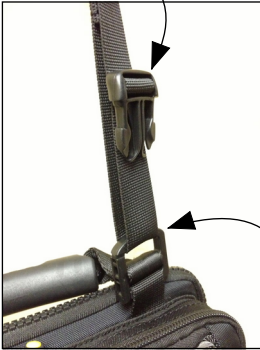


**2** Slip the strap itself right into the D3 Clip

**B2 COMPUTE Instructions**

**OPTIONAL SHOULDER STRAP INSTALLATION ONTO CS2**

**NOTE:**  
The B2 COMPUTE does not ship with a Slim Handle or Adapter Loops. It only comes with two D3 CLIPS.

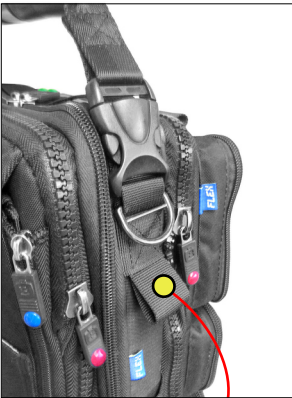

Accessory Loop



Shoulder Strap



Slide the Male Buckle up along the strap out of the way.



**Removable Top Pocket Cover**




This pocket cover can be removed for the purposes of getting it embroidered.

To remove the Top pocket cover:


- 1) Separate the Velcro on each of the two side-wall flaps.
- 2) Separate the Velcro on the inner and outer surface of the bottom wall of the pocket.
- 3) Completely unzip and separate the two halves of the zipper on each end of the zipper at the bottom of the pocket.

To install the Top pocket cover:

- 1) Start the two halves of the zipper on each end of the zipper at the bottom of the pocket. Zip up the zipper a small amount on each side.
- 2) Join the Velcro on the outer surface of the bottom wall of the pocket first.
- 3) Trap the zipper root on each side and join the Velcro on the inner surface of the bottom wall of the pocket.
- 4) Join the Velcro on each of the two side-wall flaps.

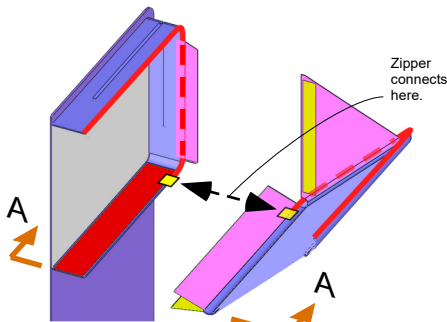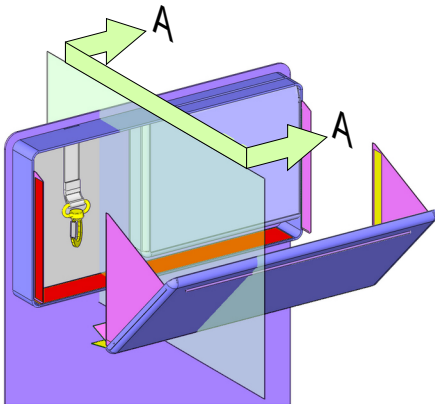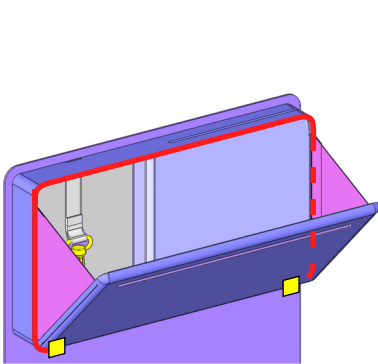

Zipper connects here.

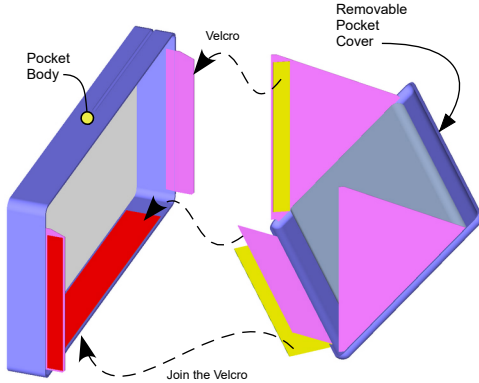

Pocket Body

Velcro

Removable Pocket Cover


Join the Velcro




**Instructions**  
for the  
**SLIM HANDLE KIT**  
and the  
**POCKET CAP**

**WARNING:**


The Slim Handle, the Adapter Loops, and the D3 Clips should only be used when the POCKET CAP FRONT and the FLAT CAP REAR are zipped together to make the B0 SLIM configuration. Any other use of these parts with larger configurations may damage the parts and/or the POCKET CAP FRONT or your gear and it will void your warranty. For example, DO NOT CARRY THE B2 COMPUTE CONFIGURATION WITH THE SLIM HANDLE. USE THE MAIN HANDLE. The extra weight of the CS2 may cause the D3 Clips to break and you may drop the bag, causing damage to the contents inside. You have been warned.

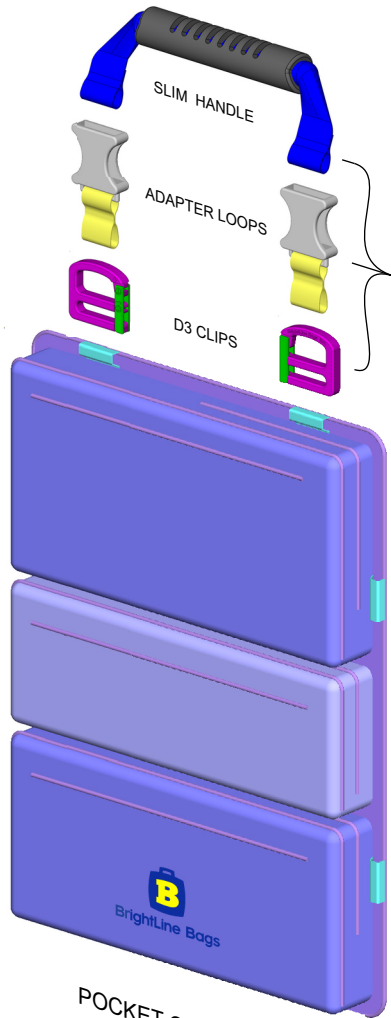

These items are included in the SLIM HANDLE KIT.

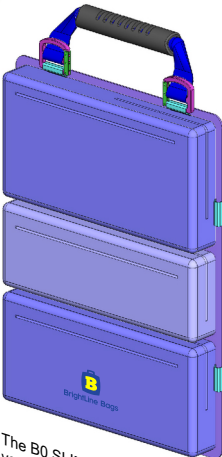

The B0 SLIM can be carried as a vertical bag or as a horizontal bag.

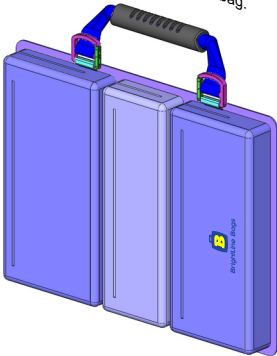

POCKET CAP FRONT

D3 CLIP Instructions

To OPEN the gate:

1

Squeeze the upper and lower arms together

2

Pivot the gate clear of the clip.

The top arm will spring back naturally.

The gate can be removed.

You should not need to remove the gate. Best to just close the gate to keep the gate and the clip together

D3 CLIP Instructions

To ASSEMBLE the gate onto the clip, follow these steps:

Clip

Gate

Notice that the rounded corner of the gate faces up, or inward toward the clip

Snap the gate into the lower arm of the clip.

The front portion of the gate has been removed to show the 3 pins

The rounded corner must face towards the lower arm.

The rounded corner must face towards the lower arm.

1

Squeeze the upper and lower arms together

2

Pivot the gate into the clip.

The top arm will spring back naturally.

Install the D3 Clips, the Slim Handle, and the Adapter Loops onto the Pocket Cap Front

In order to minimize the forces acting on the gates of the D3 Clips (so that you can reduce the chance of breaking the clips), be sure to insert the D3 Clips through the loops on the Pocket Cap so that the gates are closest to the center of the bag (as shown).

